



Separation and Purification Products Since 1992

---

# **Window Maker™**

*For Polyimide Coated Capillaries*

---

2005

## *Operating Instructions*



**MicroSolv Technology Corp.**

1 Industrial Way West Eatontown, NJ 07724 USA

email address: [info@MTC-USA.com](mailto:info@MTC-USA.com)

website: [www.MTC-USA.com](http://www.MTC-USA.com)

Phone No. 1-732-578-1777

---

## Polyimide Stripper for CE Capillaries

---

**1.** Plug the power cord into a properly rated power supply source. Your unit should indicate on the rear panel if the stripper is for use at 110/120V 60Hz (US) or 220/240V 50Hz (Non US). The red LED active light should illuminate.

---

**2.** Make certain that the 2mm aluminum burn module (black) is in good contact with the power source by applying slight pressure to the head. Position the Window Maker (Stripper) so you can easily observe the coil through the view slot in the module head.

---

**3.** Before using unit for the first time, activate the burn switch. The coil should glow in a few seconds. Release the switch immediately.

---

**4.** Use a piece of capillary that is supplied with this stripper to become familiar with the window burning procedure. Insert the capillary into the guide on the left side of the module. Thread the capillary through until the desired "window" location is within the burn area of the module (head).

---

**5.** Activate the burn switch. After the coil glows red, continue to hold down the switch for four (4) seconds and then release it. Do not exceed the recommended burn time as softening of the glass capillary may occur.

---

**6.** After removing the capillary from the stripper, carefully wipe the window area with a lint free wipe that is wet with methanol or other suitable solvent. Be careful not to bend the "window" as it is fragile.

### Important Note:

It is important to make sure that the burn switch is not activated for longer than fifteen (15) seconds. If the switch is activated for a longer time period, the heating module (head) will make the unit inoperative.

There are no serviceable parts inside the unit. Any unauthorized removal of the unit's cover will invalidate any and all warranties.

### Available Accessories:

#### Replacement Modules (head)

07201-S 2mm Window  
07204-S 4mm Window  
07301-S 1mm Window  
07207-S 7mm Window

#### Models and Voltages.

- ❖ Cat No. 07200-S 110/120 US Model:
- ❖ Cat No. 07300-S 220/240 Model-CE Marked and rated



**MicroSolv Technology Corporation**

1 Industrial Way West, Eatontown, NJ 07724 USA