

How to Change Ferrules on Di-Ad HPLC Connectors - How To

Date: 13-APRIL-2012 Last Updated: 3-NOVEMBER-2025

Ferrule replacement instructions for the Direct Adaptive Di-Ad™ HPLC column connectors

1. Change ferrule after approximately every 50 insertions or when excessive ferrule wear is detected.
2. To change ferrule, grasp it in the area of the groove with a pair of wire cutters using minimal pressure and gently pull the ferrule from the threaded stem, wiggling the ferrule if necessary.
3. Insert a new ferrule into the threaded stem and screw connector into a column port to seat the ferrule.

The Di-Ad HPLC column connectors are designed to provide universal connection to any manufacturer's 1/16th 10-32 port. Maximum pressure, 10,000 psi.

Click [HERE](#) for Di-Ad ordering information.

Printed from the Chrom Resource Center
Copyright 2025, All Rights Apply
MicroSolv Technology Corporation
9158 Industrial Blvd. NE, Leland, NC 28451

Tel: (732) 380-8900
Fax: (910) 769-9435
Email: customers@mtc-usa.com
Website: www.mtc-usa.com